


## Thermoclick™ — Basic Installation Instructions

### ACCESSORIES

Our system offers a complete set of accessories that allow for simple installation



Upper and side  
AL profile  
**U-Profile**

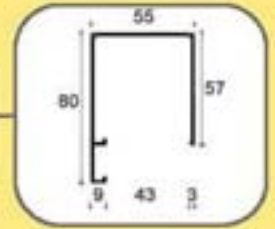

**Note:** **Base Assembly** (used at the sill) is a two piece assembly. **Use Profile** is used at Head (top) and at side that one begins installing panels from. **U-Profiles** are also used at Corners, for a clean detail. **2 Piece Base Assembly** is also used at termination of wall panels, as the last panel is inserted, then the


**Rubber  
Gasket**



**Wall Mount  
Clip**



Base AL  
profile with  
frontal opening  
**(Part 1 & 2)**

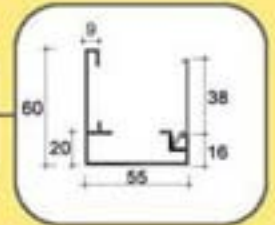

## Installation of the frame:



1) Apply glazing tape (or Silicone) to the frame



2) Install the "Base" at the first bottom corner



3) Drill holes for size and the number of screws to be used. This depends on frame type and wind load. 12" on-center is common.



4) create the first "bottom" corner; both parts are "base"



5) weep holes (1/4" every 10" to 12" ) need to be made; it doesn't matter at what installation stage you drill these holes





6) **first top corner**: “U” on top and “base” on the side



7) second **bottom** corner will be made of “Base” & “U”



8) Last corner is made with two “U” profiles; profiles may be trimmed to cover the gap between the two profiles

## Installation of the plastic parts



1) Insert the panels into the top profile (“U”). Tilt the panels just enough to allow it to get into the “U” profile





2) Insert the second panel and the ones that follow; push panel to the side—make sure the “click” is fully inserted



3) Every few sheets, you may apply the gasket (on the top “U” profile)



4) Straighten the panels so they “sit” comfortably on the “base”



5) Insert “Base Part #2”



6) As profile length is 12', and panels width is 19", apply “Base part #2” every 8 panels ; seal with gasket



7) When the last panels are inserted, apply "Base Part #2" to the side "base" profile and seal with gasket

### **Visual corner solutions (not provided by Sundance Supply; to be done "on-site")**

